


SpeedGate: REMOVE All Motor Plugs before Running Gate

USERS OF THIS SOP: WPS Certified Technicians and Qualified Contractors
APPLIES TO: SPEEDGATE Model – PDXT-C Series or PDTT Series

Please share the following with your teams responsible for installing motors in gate columns.

Attention

ALL motor plugs must be removed before running gate.

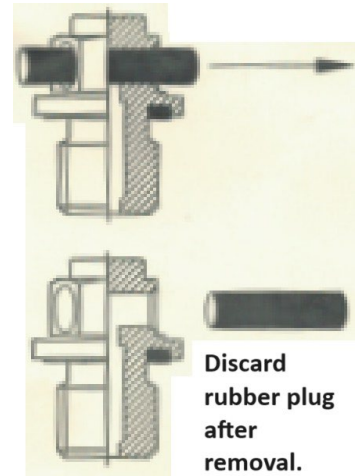


1



Take Off doors/top cover to access motor.

2

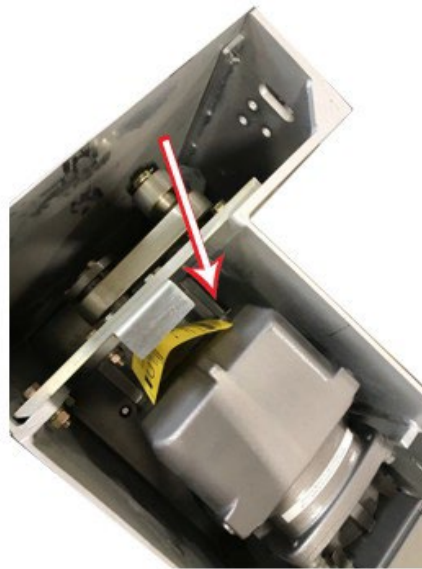

Plug
Located on top of motor.

3



REMOVE plug, discard.

NOTE: The purpose of the motor plug(s) is to prevent oil leakage during storage/transport. Once the plug is removed, the built-in vent valve is active, and no further action is required.